

**Pilot's Operating Handbook and
FAA Approved Airplane Flight Manual
Supplement
for the
TKS Anti-Ice System**

(Aircraft Serials w/ Perspective+ avionics only)

- Approved for Flight Into Known Icing (FIKI)
- 8.0 gallon usable capacity.
- 4.0 gallon tank in each wing.

When the TKS Anti-Ice System is installed on the aircraft, this POH Supplement is applicable and must be inserted in the Supplements Section of the Pilot's Operating Handbook. This document must be carried in the airplane at all times. Information in this supplement adds to, supersedes, or deletes information in the basic Pilot's Operating Handbook.

FAA Approved



Date *May 11, 2018*

Manager, Southwest Flight Test Section, AIR-713
Federal Aviation Administration
Ft. Worth, TX

Section 1 - General

This system, when compliant with the Kinds of Operation Equipment List and Minimum Dispatch Fluid Quantity, allows flight in icing conditions as defined by Title 14 of the Code of Federal Regulations (CFR) Part 25, Appendix C - Envelopes for Continuous Maximum and Intermittent Maximum Icing.

Section 2 - Limitations

In icing conditions the airplane must be operated as described in the operating procedures section of this manual. Where specific operational speeds and performance information have been established for such conditions, this information must be used.

At the first sign of Anti-Ice System malfunction, the aircraft must immediately exit icing conditions.

Environmental Conditions

Flight into any freezing rain or any freezing drizzle is prohibited.

Known icing conditions are defined by 14 CFR Part 25, Appendix C. These conditions do not include, nor were tests conducted in all icing conditions that may be encountered such as freezing rain, freezing drizzle, mixed conditions or conditions defined as severe. Flight in these conditions must be avoided. Some icing conditions not defined in 14 CFR Part 25, Appendix C have the potential of producing hazardous ice accumulations, which exceed the capabilities of the airplane's Anti-Ice System, and/or create unacceptable airplane performance including loss of control.

Inadvertent operation in freezing rain, freezing drizzle, mixed conditions, or conditions defined as severe may be detected by:

- Visible rain at temperatures below 41 °F (5 °C) OAT.
- Droplets that splash or splatter on impact at temperatures below 41 °F (5 °C) OAT.
- Ice on or behind the wing or horizontal tail panels that cannot be removed with Anti-Ice System HIGH flow.
- Unusually extensive ice accreted on the airframe in areas not normally observed to collect ice.

- Accumulation of ice on the upper surface or lower surface of the wing aft of the protected area.
- Accumulation of ice on the propeller spinner farther back than normally observed.

If the airplane encounters conditions that are determined to contain freezing rain, freezing drizzle, or severe icing, immediately exit condition by changing altitude, turning back, or if clear air is known to be immediately ahead, continue on course. Once clear of these weather conditions, report encountered weather to air traffic control

• Note •

The National Weather Service's Automated Surface Observing Systems (ASOS) program does not report freezing drizzle. It is the pilot's responsibility to evaluate and understand weather along the intended route and identify any potential weather hazards through evaluation of, but not limited to, Current Observations, Pilot Reports, Area Forecasts, AIRMETS, SIGMETS, and NOTAMS.

Airspeed Limitations

Minimum airspeed for flight into known icing conditions..... 95 KIAS*

*Includes all phases of flight, including approach, except as required for takeoff and landing.

Max airspeed Anti-Ice System operation..... 177 KIAS and 204 KTAS

Recommended holding airspeed..... 120 KIAS

Weight Limits

Maximum weight for flight into known icing conditions 3600 lb

Takeoff Limits

Takeoff is prohibited with any ice, snow, frost or slush adhering to the wing, stabilizers, control surfaces, propeller blades, or engine inlet.

Performance Limits

Refer to Section 5 - Performance for limitations that reflect effects on lift, drag, thrust and operating speeds related to operating in icing conditions.

Minimum Operating Temperature

Minimum Operating Temperature for Anti-Ice System... -30 °F (-34 °C)

Kinds of Operation

This system allows flight into known icing as defined by Title 14 of the Code of Federal Regulations (CFR) Part 25, Appendix C - Envelopes for Continuous Maximum and Intermittent Maximum Icing.

This airplane is approved for flight into known icing conditions only if the following Cirrus and FAA approved equipment is installed and fully functional.

System, Instrument, and/or Equipment	Kinds of Operation	
	IFR Day	IFR Nt.
Placards and Markings		
Airplane Flight Manual Supplement	1	1
Ice and Rain Protection		
Windshield Spray Nozzles	1	1
Wing LH and RH Inboard Panel	1	1
Wing LH and RH Outboard Panel	1	1
Horizontal Stabilizer LH and RH Panel	1	1
Vertical Stabilizer Panel	1	1
Elevator Tip LH and RH Panel	1	1
Propeller Slinger Ring	1	1
Deicing Fluid (Must meet British Specification DTD 406B.)	As Req'd	As Req'd
Lights		
Ice-Inspection Lights		1
System Control and Annunciation	1	1
Environmental System		
Cabin Heat and Defroster System	1	1
Flight Controls		
Heated Stall Warning System and Annunciation	1	1
Navigation and Pitot Static		
Pitot Heat	1	1

Minimum Dispatch Fluid Quantity

Dispatch into known icing conditions with less than 5 gallons (19 liters) of deicing fluid is prohibited. The pilot must ensure adequate fluid quantity before each flight. If dispatching without the minimum 5 gallons and icing conditions are encountered, exit icing conditions as soon as possible.

Duration Times for 5 Gallon Minimum Dispatch Fluid Quantity:

NORM90 Minutes
HIGH45 Minutes
MAX.....22.5 Minutes


Deicing Fluid Limits

Usable Tank Capacity..... 8 gal (30L)
Tank Capacity.....8.5 gal (32L)

Maximum Operating Time

Continuous operation of the aircraft in conditions that promote ice accretion is prohibited. Use of the windshield de-ice system will reduce the maximum available operating time of the system.

Normal Flow Duration..... 150 Minutes (3.2 gph)
High Flow Duration..... 75 Minutes (6.4 gph)
Maximum Flow Duration..... 37.5 Minutes (12.8 gph)

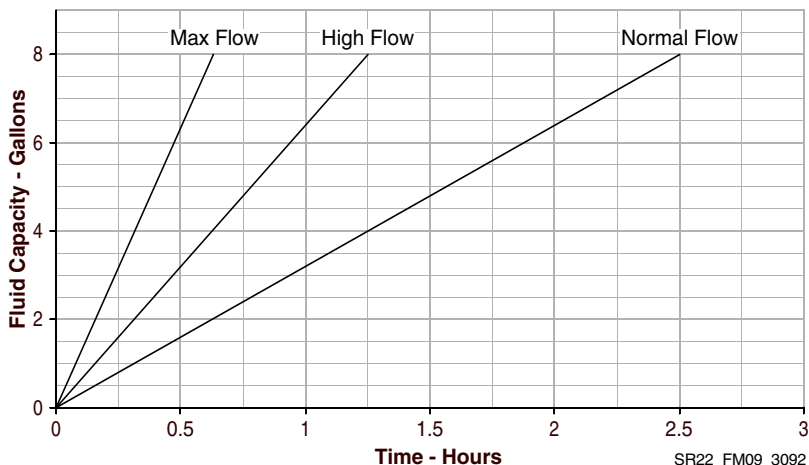

Systems and Equipment Limits

Lift Transducer Heat System

Limit ground operations of Lift Transducer Heat (PITOT HEAT) to 45 seconds.

Autopilot System

Autopilot operation is prohibited when operating in icing conditions which are outside of the CFR defined conditions as stated in the preceding Environmental Conditions paragraph.

Flap System

Unless required for Emergency operations (i.e. Forced Landing), Flaps are limited to a maximum deflection of 50% when the aircraft has encountered icing conditions and/or has accumulated ice on the airframe

When holding in icing conditions the flaps must be UP (0%).

Pilot Qualification and Training

• Note •

The Pilot Qualification and Training Limitation does not apply to airplanes registered in the European Union.

The pilot-in-command must successfully complete the Cirrus Icing Awareness Course or a Cirrus-approved equivalent training course, within 24 months prior to Flight Into Forecast or Known Icing Conditions.

Contact Cirrus Design at (218) 529-7292 for additional information.


Placards

Lower wing, above anti-ice fluid drain:

TKS FLUID DRAIN

Upper wing, above anti-ice fluid filler cap:

TKS ICE PROTECTION FLUID
USE ONLY AL-5 (DTD-406B) FLUID
4.0 US GALLONS (15.1 LITERS)
TOTAL USABLE CAPACITY

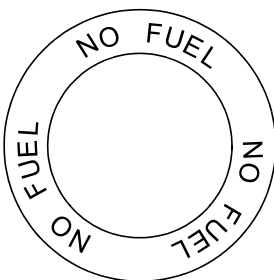

Bolster Switch Panel, left edge:

**THIS AIRCRAFT IS CERTIFIED FOR
THE FOLLOWING FLIGHT OPERATIONS
DAY - NIGHT - VFR - IFR
FLIGHT INTO KNOWN ICING WITH
REQUIRED EQUIPMENT**

**OPERATE PER AIRPLANE
FLIGHT MANUAL**

**MAXIMUM FLAP POSITION 50% IF
ICING CONDITIONS HAVE BEEN
ENCOUNTERED**

SR22_FM09_2964

**Figure-1
Required Placards**

Section 3 - Emergency Procedures

A failure of the Anti-Ice System is any condition, observed or suspected, in which the system fails to remove ice from protected surfaces including the propeller, in addition to any Anti-Ice System CAS failure annunciations. An unobserved failure may be indicated by a decrease in airspeed, anomalous handling characteristics, or airframe vibrations.

• Note •

Significant loss in cruise or climb performance may be an indication of propeller ice accretions that are not visible to the naked eye. Operation of the engine at 2500 RPM will help shed ice in severe icing conditions.

• Caution •

Continuous ice accumulations on protected areas are abnormal.

• WARNING •

With ice accumulations on the horizontal stabilizer leading edge, flaps should remain retracted for landing and the landing speed increased accordingly.

With asymmetrical ice accumulations on large portions of the wing or horizontal stabilizer, avoid flight at speeds less than 95 KIAS.

Anti-Ice System Failure / Excessive Ice Accumulation

1. ICE PROTECT 1 and 2 Circuit Breakers SET
2. Fluid Quantity SWITCH TO FULLEST TANK
3. WIND SHLD Push-Button PRESS
 - a. Repeat operation of windshield pump to verify metering pumps are primed properly as evidenced by deicing fluid exiting windshield nozzles.
4. ICE PROTECT Mode Switch VERIFY HIGH
5. PUMP BKUP Switch ON

If determined windshield pump is not priming:

- a. Exit Icing Conditions Immediately.
- b. Airspeed 95 KIAS OR GREATER

Maintain a minimum airspeed of 95 KIAS or higher to stay above pre-stall buffet. If unable to maintain this airspeed, allow altitude to decrease in order to maintain 95 KIAS.

- c. Minimum Approach Speed w/ Residual Ice (Flaps 50%) 88 KIAS

In severe icing conditions, it may not be possible to maintain altitude or proper glide path on approach; in this case, it is imperative that a safe airspeed be maintained, the stall warning system may not function and there may be little or no pre-stall buffet with heavy ice loads on the wing.

- d. FLAPS MINIMUM REQUIRED

When landing is assured, select the minimum flap setting required, not to exceed 50%, and maintain extra airspeed consistent with available field length. Do not retract the flaps once they have been extended unless required for go-around.


Maximum Glide with Ice Accumulation

Conditions		Example:	
Power	OFF	Altitude	10,000 ft. AGL
Propeller	Windmilling	Airspeed	92 KIAS
Flaps	0% (UP)	Glide Distance	10.5 NM
Wind	Zero		

Best Glide Speed

92 KIAS at 3600 lb

Maximum Glide Ratio ~ 6.4: 1

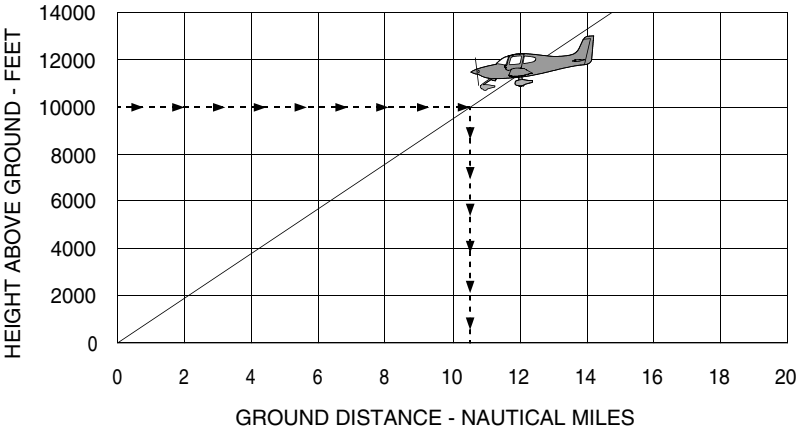

Section 3A - Abnormal Procedures

Windshield De-Ice System Malfunction

1. ICE PROTECT 1 Circuit Breaker CYCLE
2. Fluid Quantity..... SWITCH TO FULLEST TANK
3. WIND SHLD Push-Button..... PRESS AS REQUIRED
If the forward field of view is overly restricted during landing approach and taxiing:
 - a. Cabin HeatHOT
 - b. Windshield DefrostON
 - c. Execute a forward slip as required for visibility.
 - d. Avoid taxiing without adequate forward visibility.

Heated Lift Transducer Malfunction

Airframe buffet before the stall is a good indication of an impending stall.

The stall warning horn typically activates prematurely if there is ice accumulated on the lift transducer vane.

Some ice accumulation on the inboard/outboard edges of the lift transducer faceplate is considered normal.

If ice forms on lift transducer vane:

1. STALL VANE HEAT Circuit Breaker CYCLE
2. PITOT HEAT Switch..... CYCLE OFF, ON

If ice remains on lift transducer vane:

1. Stall Warning System..... EXPECT NO RELIABLE INDICATION
This includes:
 - *Impending stall warning.*
 - *Stall speed indication.*
2. Airspeed..... MONITOR, DO NOT STALL
3. Fly published V_{REF} speeds MINIMUM 88 KIAS
WITH 50% FLAP

Static System Malfunction

If erroneous readings on the pilot's flight instruments are suspected the static button(s) on side of fuselage may be obstructed. Refer to *Section 3A - Abnormal Procedures, Static Source Blocked* in the basic handbook.

Anti-Ice System CAS Annunciations

• Note •

During Anti-Ice System activation, system mode changes, operation at temperatures above freezing or with warm deicing fluid, occasional ANTI ICE annunciations are normal.

Low Fluid Quantity Caution and Warning

ANTI ICE QTY

PFD Alerts Window: "Fluid quantity is low (TKS)"

ANTI ICE QTY Warning: Fluid quantity is less than 0.5 gallon. (1.9 L)

ANTI ICE QTY Caution: Fluid quantity is less than 1.0 gallon. (3.8 L)

• Note •

Depending on the selected flow rate, ANTI ICE QTY annunciation may occur at lower fluid quantities.

1. Icing Conditions AVOID / EXIT

Lift Transducer Overheat Warning

AOA OVERHEAT

PFD Alerts Window: "AOA probe is overheated"

• Note •

Operation of Pitot Heat on hot days may annunciate the AOA OVERHEAT Warning when flying at slow speeds. When air temperatures are greater than 41 °F (5 °C), operation of Pitot Heat is at discretion of the pilot. If overheat warning is annunciated, Pitot Heat should remain OFF.

1. PITOT HEAT Switch.....OFF
2. Icing Conditions AVOID / EXIT

Tank Control Failure Warning

ANTI ICE CTL

PFD Alerts Window: "Tank valves cannot be controlled (closed) (TKS)"

Tank selection is inoperative and both left and right are open, typical with GIA failure.

1. Icing Conditions AVOID / EXIT

Unreliable Fluid Quantity Warning

ANTI ICE QTY

PFD Alerts Window: "Left and right fluid quantities unknown (TKS)"

Both fluid quantities are unknown and both tanks are closed.

1. ICE PROTECT System Switch.....OFF
2. Icing Conditions AVOID / EXIT

Low Pressure Caution.

ANTI ICE PSI

PFD Alerts Window: "Tail pressure is low (TKS)"

• Caution •

A persistent Low Pressure Caution indicates a condition in the tail section of Anti-Ice System and warrants increased caution because the tail section's smaller leading edge radius will typically collect ice more quickly and ice accretion is more difficult to monitor.

1. ICE PROTECT 1 and 2 Circuit Breakers.....SET
2. Fluid QuantitySWITCH TO FULLEST TANK
3. WIND SHLD Push-ButtonPRESS
 - a. Repeat operation of windshield pump to verify metering pumps are primed properly as evidenced by deicing fluid exiting windshield nozzles.
4. ICE PROTECT Mode Switch.....HIGH

If caution annunciation extinguishes:

- a. Anti-Ice System MONITOR

If caution annunciation does not extinguishes or intermittent:

- a. PUMP BKUP Switch ON
- b. Icing Conditions AVOID / EXIT

High Pressure Caution

ANTI ICE PSI

PFD Alerts Window: "Pressure is high (TKS)"

Typically indicates clogged filter.

1. Evidence of Anti-Ice Flow MONITOR / VERIFY
2. Icing Conditions AVOID / EXIT

Airspeed Caution

ANTI ICE SPD

PFD Alerts Window: "Airspeed is too low/high for ice protection (TKS)"

ANTI ICE SPD Low: Airspeed is less than 95 KIAS

ANTI ICE SPD High: Airspeed is greater than 177 KIAS or 204 KTAS

1. Airspeed..... MAINTAIN 95-177 KIAS
OR LESS THAN 204 KTAS

Lift Transducer Heater Failure Caution

ANTI ICE HTR

PFD Alerts Window: "Stall warning/AoA heater has failed"

1. STALL VANE HEAT Circuit Breaker CYCLE
2. PITOT HEAT Circuit Breaker CYCLE
3. Icing Conditions AVOID / EXIT
4. Fly aircraft normally using airframe buffet as the stall warning. Ice accumulations on the lift transducer vane may result in unreliable stall warning system operation.

Fluid Quantity Imbalance Caution

ANTI ICE QTY

PFD Alerts Window: "Fluid quantity imbalance has been detected"

Imbalance between left and right sensed fluid quantity is greater than 1.0 gallon.

1. Revert to AUTO control of the fluid source to control the fluid quantity.

If ANTI ICE PSI annunciates:

- a. Revert to manual control of the fluid source to control the fluid level quantity.

(1) Fluid Quantity SWITCH TO FULLEST TANK

- b. WIND SHLD Push-Button PRESS

(1) Repeat operation of windshield pump to verify metering pumps are primed properly as evidenced by deicing fluid exiting windshield nozzles.

If Caution Annunciation extinguishes:

- a. Anti-Ice System MONITOR

If Caution Annunciation does not extinguish or intermittent:

- a. Fluid Quantity SWITCH TO OPPOSITE TANK

- b. WIND SHLD Push-Button PRESS

(1) Repeat operation of windshield pump to verify metering pumps are primed properly as evidenced by deicing fluid exiting windshield nozzles.

- c. Icing Conditions AVOID / EXIT

Left/Right Fluid Quantity Caution - Serials 22T-1460, 22T-1471, 22T-1473 thru 22T-1709, 22T-1732

ANTI ICE LVL

PFD Alerts Window: "Right/Left tank fluid quantity is unreliable (TKS)"

L / R fluid quantities on Anti Ice - TKS block of ENGINE page is "greyed out" and/or fluid quantity is marked with a "Red X". The deicing fluid sensing system has detected conflicting system information regarding the fluid quantity in the tanks.

1. Revert to manual control of the fluid source to control the fluid level quantity.

If ANTI ICE PSI annunciates:

- a. Fluid Quantity SWITCH TO OPPOSITE TANK
- b. WIND SHLD Push-Button PRESS

- (1) Repeat operation of windshield pump to verify metering pumps are primed properly as evidenced by deicing fluid exiting windshield nozzles.

Dynamic Stall Speed Band Unavailable Advisory

AOA FAIL

PFD Alerts Window: "Dynamic stall speed band is unavailable."

Angle of Attack signal has failed. This signal is used to calculate and display a dynamic stall speed awareness band (red band) on airspeed tape. With a failed AOA signal, the low speed red band extends to a fixed value of 61 knots.

Flaps Ice Warning

FLAPS ICE

Full flaps prohibited in icing conditions.

1. Flaps SET UP OR 50%

• WARNING •

Maximum flap deflection in icing conditions is limited to 50%.

Section 4 - Normal Procedures

• WARNING •

Holding in icing conditions for longer than 45 minutes may reduce margins and could result in inadequate handling and control characteristics.

Flight into known icing conditions is prohibited if porous panels do not fully "wet-out" prior to entering icing conditions, or if ANTI ICE CAS messages persist.

• Caution •

Prolonged operation of the system in clear air, above 15,000 feet MSL and temperatures less than -4 °F (-20 °C) can result in "flash" evaporation of water and alcohol from the anti-ice fluid. This evaporation results in a glycol rich fluid that could become "gel" like on the wing surface until aircraft enters precipitation or warmer temperatures.

Limit ground operations of Lift Transducer Heat (PITOT HEAT) to 45 seconds. Operation of Lift Transducer Heat in excess of 45 seconds while on the ground may cause excessive temperature on the lift transducer faceplate and surrounding wing skin.

• Note •

This system is most effective when operated as an anti-ice system to prevent ice accretions on protected surfaces. For optimal performance, the system should be primed on the ground to verify all protected surfaces wet-out fully. The system should then be activated prior to entering icing conditions to confirm the protected surfaces wet-out fully before ice accretion begins.

The Anti-Ice System is approved for operation with ice protection fluid that has a very temperature-dependent viscosity characteristic. As the temperature of the fluid rises above freezing (32 °F / 0 °C), the fluid becomes much less viscous (thins) and pass through the porous membrane of the panels with less resistance (pressure drop). This decrease in pressure drop reduces the pressure in the panel reservoir

which may not be adequate to wet-out the entire panel if the Pre-Flight Inspection is performed at warmer temperatures.

Increasing the system flow rate (MAX vs. HIGH or HIGH w/ PUMP BKUP vs. HIGH) will increase the arterial pressure of the system which promotes the complete wet-out of the porous panels.

Pre-Flight Inspection

1. Cabin

- a. Circuit Breakers SET
- b. Battery 1 Master Switch ON
- c. Flaps 100%
- d. Avionics Master Switch ON
- e. Cabin Speaker ON
- f. Cabin Doors CLOSE
- g. WIND SHLD Push-Button PRESS
 - (1) Verify evidence of deicing fluid from spray nozzles.
- h. PUMP BKUP Switch ON
 - (1) Metering Pump Duty Cycle VERIFY CONTINUOUSLY ON
 - (2) Deicing Fluid and Endurance Indications CHECK
- i. PUMP BKUP Switch OFF
- j. ICE PROTECT System Switch ON
- k. ICE PROTECT Mode Switch NORM
 - (1) Metering Pump Duty Cycle VERIFY 30s ON, 90s OFF
 - (2) Deicing Fluid and Endurance Indications CHECK
- l. ICE PROTECT Mode Switch HIGH
 - (1) Metering Pump Duty Cycle VERIFY CONTINUOUSLY ON
 - (2) Deicing Fluid and Endurance Indications CHECK

Continued on following page.

- m. ICE Inspection Lights Switch ON
(1) Verify LH and RH Operation.
- n. PITOT HEAT Switch.....ON 45 SECONDS, THEN OFF
- 2. Empennage
 - a. Stabilizers Porous PanelsCONDITION / SECURITY
(1) Verify Evidence of Deicing Fluid Along Length of Panels and Elevator Horns.
- 3. Right Wing Forward and Main Gear
 - a. Fluid Tank VERIFY DESIRED QUANTITY
(1) Filler Cap..... CONDITION AND SECURITY
(2) Fluid Vent (underside wing)..... UNOBSTRUCTED
 - b. Porous Panels..... CONDITION AND SECURITY
(1) Verify Evidence of Deicing Fluid Along Length of Panels.

• WARNING •

Lift Transducer Faceplate and Vane may be HOT.

- c. Lift Transducer Faceplate PERCEPTIBLY HOT
- d. Lift Transducer VaneVERY HOT
(1) Verify Stall Warning audio alert after lifting stall vane with wooden tooth pick or tongue depressor.
- 4. Nose, Right Side
 - a. Ice-Inspection LightCONDITION / SECURITY
- 5. Nose Gear, Propeller, Spinner
 - a. Slinger Ring EVIDENCE OF DEICING FLUID
- 6. Nose, Left Side
 - a. Ice-Inspection LightCONDITION / SECURITY
 - b. Windshield Spray NozzlesCONDITION / SECURITY

Continued on following page.

7. Left Wing Forward and Main Gear
 - a. Fluid Tank VERIFY DESIRED QUANTITY
 - (1) Filler Cap..... CONDITION AND SECURITY
 - (2) Fluid Vent (underside wing) UNOBSTRUCTED
 - b. Porous PanelsCONDITION / SECURITY
 - (1) Verify Evidence of Deicing Fluid Along Length of Panels.
8. Left Wing Tip

• WARNING •

Pitot Probe may be HOT.

- a. Pitot Probe (underside) UNOBSTRUCTED
 - b. Pitot Probe..... VERY HOT
9. Cabin
 - a. Fluid Quantity VERIFY 5 GALLON MINIMUM
 - b. ICE PROTECT System Switch OFF
 - c. Flaps.....0%
 - d. Battery 1 Master Switch OFF
 - e. Avionics Master Switch..... OFF
 - f. Cabin Speaker..... OFF

Ice Formation Determination

Typically, a leading edge with a small radius will collect ice more quickly than a leading edges with a large radius. To help monitor possible ice accumulation, a thin metal tab is attached to the outboard end of the RH and LH stall strips. In some icing conditions this tab may be the first place that airframe ice accretion is noticeable. Additionally, refer to other areas of the aircraft, such as the horizontal tail and lower windscreen, to aid in determining if ice is accreting to the aircraft.

Before Takeoff

If icing conditions are anticipated immediately after take-off:

1. ICE PROTECT System Switch..... ON
2. ICE PROTECT Mode Switch..... NORM / HIGH
3. PITOT HEAT Switch ON
4. Cabin Heat HOT
5. Windshield Defrost ON
6. Ice-Inspection Lights AS REQUIRED
7. Verify airframe is free of contamination immediately before takeoff.
8. FlapsRETRACT AS SOON AS PRACTICAL

In Flight

If Inadvertent Icing Encounter OR Icing Conditions Exist:

1. PITOT HEAT SwitchVERIFY ON
2. ICE PROTECT System Switch..... ON
3. ICE PROTECT Mode Switch..... NORM
4. WIND SHLD Push-Button PRESS AS REQUIRED
5. Monitor ice accumulation.

If ice accretions persist on protected surfaces following each cycle:

- a. ICE PROTECT Mode..... HIGH

If ice continues accumulating on protected surfaces:

- b. ICE PROTECT Mode Push-Button MAX

If ice accretions do not shed from protected surfaces:

- c. PUMP BKUP Switch ON
- d. Perform Anti-Ice System Failure checklist.
- e. WIND SHLD Push-Button..... PRESS AS REQUIRED
- f. Airspeed MAINTAIN 95-177 KIAS

OR LESS THAN 204 KTAS

While in Icing Conditions:

1. FLAPS UP
2. Ice-Inspection Lights AS REQUIRED
3. Cabin HeatHOT
4. Windshield Defrost.....ON
5. Fluid Quantity and Endurance MONITOR
 - a. Ensure adequate quantity to complete flight.

After Leaving Icing Conditions:

1. Anti-Ice System..... OFF
2. Airspeed..... AS FLIGHT CONDITIONS DICTATE
3. Ice-Inspection Lights AS REQUIRED
4. Cabin Heat AS REQUIRED
5. Windshield Defrost..... AS REQUIRED
6. WIND SHLD Push-Button PRESS AS REQUIRED

Cruise

During icing encounters in cruise, increase engine power to maintain cruise speed as ice accumulates on the unprotected areas and causes the aircraft to slow down.

The autopilot may be used in icing conditions. However, every 30 minutes the autopilot should be disconnected to detect any out-of-trim conditions caused by ice buildup. If significant out-of-trim or other anomalous conditions are detected, the autopilot should remain off for the remainder of the icing encounter.

When disconnecting the autopilot with ice accretions on the airplane, the pilot should be alert for out-of-trim forces.

Approach and Landing

If Icing Conditions Exist:

1. ICE PROTECT System Switch..... ON
2. ICE PROTECT Mode Switch..... HIGH
3. Monitor ice accumulation.
If ice continues accumulating on protected surfaces:
 - a. ICE PROTECT Mode Push-Button MAX
If ice accretions do not shed from protected surfaces:
 - b. PUMP BKUP Switch ON
 - c. Perform Anti-Ice System Failure checklist.
4. WIND SHLD Push-Button PRESS AS REQUIRED

• Caution •

To prevent an obstructed view due to residual deicing fluid on windshield, do not operate windshield de-ice system within 30 seconds of landing.

5. Ice-Inspection Lights AS REQUIRED
6. Flaps 50%
7. Airspeed MINIMUM OF 95 KIAS
8. Airspeed on Short Final 88 KIAS

After Landing and Shutdown

1. PITOT HEAT Switch OFF
2. ICE PROTECT System Switch OFF
3. PUMP BKUP Switch OFF
4. Ice-Inspection Lights OFF

• Note •

When the Anti-Ice System has been used, avoid touching the airframe structure or windshield as they will be partially covered with deicing fluid. Clean the deicing fluid from the windshield and the porous panels as described in Section 8, Handling, Service, & Maintenance.

Section 5 - Performance

Airplane stall speeds without ice accumulation are essentially unchanged with the installation of the Ice Protection System. Airplane performance (range and speed), however, is affected by the porous panels; range is reduced by a maximum of 2% and cruise performance is reduced by approximately 4 knots.

Significant climb and cruise performance degradation, range reduction, as well as buffet and stall speed increase can be expected if ice accumulates on the airframe. Residual ice on the protected areas and ice accumulation on the unprotected areas of the airplane can cause noticeable performance losses and stall speed increases even with the Anti-Ice System operating.

Stall Speeds with Ice Accumulation

Conditions:

- Weight 3600 LB
- CG Noted
- Power Idle
- Bank Angle Noted

• Note •

Altitude loss during wings level stall may be 600 feet or more.

KIAS values may not be accurate at stall.

Weight LB	Bank Angle Deg	STALL SPEEDS			
		Flaps 0% Full Up		Flaps 50%	
		KIAS	KCAS	KIAS	KCAS
3600 Most FWD CG	0	77	76	72	69
	15	79	77	73	70
	30	83	82	75	74
	45	91	90	82	82
	60	107	107	95	98
3600 Most AFT CG	0	77	76	72	69
	15	79	77	73	70
	30	83	82	75	74
	45	91	90	82	82
	60	107	107	95	98

Enroute Climb Gradient with Ice Accumulation

Conditions:

- Power Full Throttle
- Mixture Full Rich (Green Arc)
- Flaps 0% (UP)
- Airspeed Best Rate of Climb

• Note •

Climb Gradients shown are the gain in altitude for the horizontal distance traversed expressed as Feet per Nautical Mile.

Fuel flow must be set to top of green arc for all takeoffs and climbs.

Cruise climbs or short duration climbs are permissible at best power as long as altitudes and temperatures remain within those specified in the table.

For operation in air colder than this table provides, use coldest data shown.

Negative climb data shown in heavier table borders.

Weight LB	Press Altitude FT	Climb Speed KIAS	CLIMB GRADIENT - Feet / Nautical Mile				ISA
			Temperature ~°C				
			-20	-10	0	5	
3600	SL	103	728	658	591	560	452
	2000	103	662	596	533	502	367
	4000	103	600	537	477	448	286
	6000	102	541	482	425	397	207
	8000	102	486	429	375	349	380
	10000	102	434	380	329	304	354
	12000	102	385	334	285	262	328
	14000	102	338	290	244	222	304
	16000	101	295	249	206	185	280
	18000	101	254	211	170	150	258
	20000	101	216	175	136	118	237
	22000	100	133	73	17	-9	188
	24000	98	56	-1	-53	-79	133
	25000	97	18	-36	-87	-112	106

Enroute Climb Gradient (Continued)

Weight	Press Altitude	Climb Speed	CLIMB GRADIENT - Feet / Nautical Mile				
			Temperature ~°C				
LB	FT	KIAS	-20	-10	0	5	ISA
2900	SL	103	978	889	805	765	585
	2000	103	895	811	732	694	487
	4000	103	817	738	663	626	393
	6000	102	743	668	597	563	302
	8000	102	674	603	536	503	211
	10000	102	609	542	478	447	120
	12000	102	548	484	424	395	30
	14000	102	490	430	373	346	-61
	16000	101	437	380	326	300	-132
	18000	101	386	332	281	257	-203
	20000	101	339	288	240	217	-274
	22000	100	297	249	203	180	-345
	24000	98	260	215	171	148	-416
	25000	97	237	197	157	134	-448

Enroute Rate of Climb with Ice Accumulation

Conditions:

- Power Full Throttle
- Mixture Full Rich (Green Arc)
- Flaps 0% (UP)
- Airspeed Best Rate of Climb

• Note •

Rate-of-Climb values shown are change in altitude in feet per unit time expressed in Feet per Minute.

Fuel flow must be set to top of green arc for all takeoffs and climbs.

Cruise climbs or short duration climbs are permissible at best power as long as altitudes and temperatures remain within those specified in the table.

For operation in air colder than this table provides, use coldest data shown.

Negative climb data shown in heavier table borders.

Weight LB	Press Altitude FT	Climb Speed KIAS	RATE OF CLIMB ~ Feet per Minute				ISA
			Temperature ~°C				
			-20	-10	0	5	
3600	SL	103	1166	1075	986	942	1398
	2000	103	1099	1009	920	876	1279
	4000	103	1032	943	854	810	1160
	6000	102	966	876	788	744	1041
	8000	102	899	810	722	678	731
	10000	102	833	744	656	613	700
	12000	102	767	678	591	548	669
	14000	102	700	613	526	482	638
	16000	101	635	547	460	417	608
	18000	101	569	482	395	352	577
	20000	101	503	416	330	287	546
	22000	100	319	179	43	-24	445
	24000	98	137	-1	-136	-203	318
	25000	97	46	-92	-226	-292	255

Enroute Rate of Climb (Continued)

Weight LB	Press Altitude FT	Climb Speed KIAS	RATE OF CLIMB ~ Feet per Minute				ISA
			Temperature ~°C				
			-20	-10	0	5	
2900	SL	103	1556	1446	1337	1283	986
	2000	103	1477	1368	1260	1206	837
	4000	103	1399	1290	1182	1129	688
	6000	102	1321	1213	1105	1052	540
	8000	102	1244	1136	1029	976	1484
	10000	102	1167	1059	953	900	1462
	12000	102	1090	983	877	825	1440
	14000	102	1014	908	802	750	1418
	16000	101	938	832	728	676	1397
	18000	101	863	758	654	602	1376
	20000	101	789	684	580	529	1355
	22000	100	569	399	233	152	722
	24000	98	354	186	22	-59	575
	25000	97	247	80	-83	-163	502

Time, Fuel & Distance to Climb: Full Power Climb with Ice Accumulation

Conditions:

- Power Full Throttle
- Mixture Maintain Fuel Flow in GREEN ARC
- Weight 3600 LB
- Winds Zero
- Climb Airspeed Best Rate (Per Table Below)

• Note •

Taxi Fuel - Add 1.5 gallon for start, taxi, and takeoff.

Temperature - Add 10% to computed values for each 10° C above standard.

Fuel flow must be maintained in the dynamic green arc, per AFM Full Power Climb: Rich of Peak Technique procedure.

Press Alt FT	OAT (ISA) °C	Climb Speed KIAS	TIME, FUEL, DISTANCE ~ From Sea Level		
			Time Minutes	Fuel U.S. Gal	Distance NM
S.L.	15	103	0.0	0.0	0.0
1000	13	103	1.2	0.7	2.1
2000	11	103	2.4	1.4	4.2
3000	9	103	3.6	2.2	6.4
4000	7	103	4.9	2.9	8.7
5000	5	103	6.2	3.7	11.1
6000	3	102	7.5	4.5	13.6
7000	1	102	8.9	5.3	16.1
8000	-1	102	10.2	6.1	18.7
9000	-3	102	11.6	7.0	21.5
10000	-5	102	13.1	7.8	24.3
11000	-7	102	14.5	8.7	27.2
12000	-9	102	16.0	9.6	30.3
13000	-11	102	17.6	10.5	33.5
14000	-13	102	19.1	11.5	36.8
15000	-15	102	20.7	12.4	40.2
16000	-17	101	22.4	13.4	43.8
17000	-19	101	24.1	14.4	47.5
18000	-21	101	25.8	15.5	51.4
19000	-23	101	27.6	16.6	55.5
20000	-25	101	29.5	17.6	59.7
21000	-27	101	31.4	18.8	64.3
22000	-29	100	33.7	20.0	69.7

Cruise Performance with Ice Accumulation

Conditions:

- Weight 3400 LB
- Winds.....Zero

• Note •

Subtract 10 KTAS if nose wheel pant and fairing removed. Lower KTAS by 10% if nose and main wheel pants & fairings are removed.

Aircraft with optional Air Conditioning System: Cruise performance is reduced by 2 knots. For maximum performance, turn air-conditioner off.

Aircraft with optional Enhanced Vision System: Cruise performance is reduced by up to 1 knot.

Cruise data not shown for power settings resulting in airspeeds with inadequate stall margins.

CRUISE PERFORMANCE			ISA -30 °C		ISA		ISA +30 °C	
Altitude (ft MSL)	Power (% of 315)	FF (GPH)	TAS (KTAS)	Econ (nm/gal)	TAS (KTAS)	Econ (nm/gal)	TAS (KTAS)	Econ (nm/gal)
2000	85%	18.3	149	8.1				
	75%	16.4	138	8.4				
	65%	14.6	123	8.4				
	55%	12.7	104	8.2				
4000	85%	18.3	151	8.2				
	75%	16.4	139	8.4				
	65%	14.6	123	8.4				
	55%	12.7	104	8.2				
6000	85%	18.3	152	8.3				
	75%	16.4	140	8.5				
	65%	14.6	123	8.5				
	55%	12.7	103	8.1				
8000	85%	18.3	154	8.4	162	8.8		
	75%	16.4	141	8.5	148	9.0		
	65%	14.6	124	8.5	131	9.0		
10000	85%	18.3	156	8.5	164	8.9		
	75%	16.4	141	8.6	149	9.1		
	65%	14.6	124	8.5	131	9.0		

CRUISE PERFORMANCE			ISA -30 °C		ISA		ISA +30 °C	
Altitude (ft MSL)	Power (% of 315)	FF (GPH)	TAS (KTAS)	Econ (nm/gal)	TAS (KTAS)	Econ (nm/gal)	TAS (KTAS)	Econ (nm/gal)
12000	85%	18.3	157	8.6	165	9.0		
	75%	16.4	142	8.7	150	9.1		
	65%	14.6	123	8.4	131	9.0		
14000	85%	18.3	158	8.6	167	9.1		
	75%	16.4	142	8.7	151	9.2		
	65%	14.6	123	8.4	131	9.0		
16000	85%	18.3	165	9.0	168	9.2		
	75%	16.4	150	9.1	151	9.2		
	65%	14.6	131	9.0	131	9.0		
18000	85%	18.3	167	9.1	169	9.2		
	75%	16.4	151	9.2	151	9.2		
	65%	14.6	131	9.0				
20000	85%	18.3	168	9.2	170	9.3		
	80%	17.4	160	9.2	161	9.3		
	75%	16.4	151	9.2	151	9.2		
	65%	14.6	131	8.9				
22000	85%	18.3	169	9.2	171	9.3		
	80%	17.4	161	9.3	162	9.3		
	75%	16.4	151	9.2	151	9.2		

Range / Endurance: Full Power Climb with Ice Accumulation

Conditions:

- Mixture Best Economy - Target Fuel Flow or less
- Weight 3600 LB for Climb, Avg 3400 LB for Cruise
- Winds Zero
- Total Fuel 92 Gallons

• Note •

Fuel Remaining for Cruise in this table is based on climb per AFM Full Power Climb (Rich of Peak Technique) procedure.

Fuel Remaining for Cruise is equal to 92.0 gallons usable, less 1.5 gallons (pre-takeoff fuel consumed), 11 gallons (45 minute IFR reserve at 65% power), and listed volume for fuel consumed in Full Power Climb.

Range is decreased by 5% if nose wheel pant and fairings removed.

Range is decreased by 15% of nose wheel and main wheel pants and fairings removed.

For aircraft with optional Air Conditioning System: range is decreased by 1% if system in operation.

Aircraft with optional Enhanced Vision System: range is decreased by ½%.

Range / Endurance: 85% Power Cruise - Full Power Climb							
Press Alt FT	Climb Fuel Gal	Fuel Remaining For Cruise Gal	Airspeed KTAS	Fuel Flow GPH	Endurance Hours	Range NM	Specific Range Nm/Gal
2000	1.4	78.1	152	18.3	4.3	654	8.3
4000	2.9	76.6	154	18.3	4.2	653	8.4
6000	4.5	75.0	155	18.3	4.1	650	8.5
8000	6.1	73.4	157	18.3	4.0	647	8.6
10000	7.8	71.7	158	18.3	3.9	643	8.6
12000	9.6	69.9	159	18.3	3.8	638	8.7
14000	11.5	68.1	160	18.3	3.7	632	8.7
16000	13.4	66.1	161	18.3	3.6	624	8.8
18000	15.5	64.1	161	18.3	3.5	615	8.8
20000	17.6	61.9	162	18.3	3.4	606	8.8
22000	20.0	59.5	162	18.3	3.2	595	8.8
24000	23.3	56.3	161	18.3	3.1	579	8.8
25000	25.4	54.1	161	18.3	3.0	569	8.8

Range / Endurance: Full Power Climb with Ice Accumulation (Continued)

Range / Endurance: 75% Power Cruise - Full Power Climb							
Press Alt	Climb Fuel	Fuel Remaining For Cruise	Airspeed	Fuel Flow	Endurance	Range	Specific Range
FT	Gal	Gal	KTAS	GPH	Hours	NM	Nm/Gal
2000	1.4	78.1	140	16.4	4.8	667	8.5
4000	2.9	76.6	140	16.4	4.7	663	8.5
6000	4.5	75.0	141	16.4	4.6	658	8.6
8000	6.1	73.4	142	16.4	4.5	652	8.6
10000	7.8	71.7	142	16.4	4.4	645	8.7
12000	9.6	69.9	143	16.4	4.3	637	8.7
14000	11.5	68.1	143	16.4	4.1	627	8.7
16000	13.4	66.1	142	16.4	4.0	617	8.7
18000	15.5	64.1	142	16.4	3.9	605	8.6
20000	17.6	61.9	142	16.4	3.8	593	8.6
22000	20.0	59.5	141	16.4	3.6	579	8.6

Range / Endurance: 65% Power Cruise - Full Power Climb							
Press Alt	Climb Fuel	Fuel Remaining For Cruise	Airspeed	Fuel Flow	Endurance	Range	Specific Range
FT	Gal	Gal	KTAS	GPH	Hours	NM	Nm/Gal
2000	1.4	78.1	123	14.6	5.4	665	8.5
4000	2.9	76.6	124	14.6	5.3	658	8.5
6000	4.5	75.0	124	14.6	5.1	649	8.5
8000	6.1	73.4	123	14.6	5.0	639	8.5
10000	7.8	71.7	123	14.6	4.9	629	8.4
12000	9.6	69.9	122	14.6	4.8	617	8.4

Range / Endurance: 55% Power Cruise - Full Power Climb							
Press Alt	Climb Fuel	Fuel Remaining For Cruise	Airspeed	Fuel Flow	Endurance	Range	Specific Range
FT	Gal	Gal	KTAS	GPH	Hours	NM	Nm/Gal
2000	1.4	78.1	103	12.7	6.1	639	8.1

Balked Landing Climb Gradient with Ice Accumulation

Conditions:

- Power..... Full Throttle
- Mixture..... Set per Placard
- Flaps..... 50% (DN)
- Climb Airspeed V_{REF}

• Note •

Balked Landing Climb Gradients shown are the gain in altitude for the horizontal distance traversed expressed as Feet per Nautical Mile.

For operation in air colder than this table provides, use coldest data shown.

Weight LB	Press Alt FT	Climb Speed, V_{REF} KIAS	CLIMB GRADIENT ~ Feet/Nautical Mile				
			Temperature ~°C				
			-20	-10	0	5	ISA
3600	SL	88	796	726	660	628	
	2000	88	740	673	610	579	
	4000	88	686	622	562	533	
	6000	88	635	574	517	489	
	8000	88	586	529	474	448	479
	10000	88	540	486	434	408	459
2900	SL	88	1087	999	915	874	
	2000	88	1015	931	851	813	
	4000	88	947	867	791	755	
	6000	88	883	807	735	700	
	8000	88	822	750	681	648	687
	10000	88	764	696	630	599	662

Balked Landing Rate of Climb with Ice Accumulation

Conditions:

- Power Full Throttle
- Mixture Set per Placard
- Flaps 50%
- Climb Airspeed V_{REF}

• Note •

Balked Landing Rate of Climb values shown are the 50% flaps change in altitude for unit time expended expressed in Feet per Minute.

For operation in air colder than this table provides, use coldest data shown.

Weight	Press Alt	Climb Speed, V_{REF}	RATE OF CLIMB - Feet per Minute				
			Temperature ~°C				ISA
LB	FT	KIAS	-20	-10	0	5	
3600	SL	88	1104	1028	953	915	
	2000	88	1065	989	914	876	
	4000	88	1025	950	875	837	
	6000	88	986	911	836	798	
	8000	88	947	872	797	759	804
	10000	88	908	832	758	720	795
2900	SL	88	1496	1405	1313	1268	
	2000	88	1452	1361	1270	1224	
	4000	88	1408	1317	1226	1181	
	6000	88	1364	1274	1183	1138	
	8000	88	1321	1231	1140	1095	1149
	10000	88	1278	1188	1098	1053	1143

Landing Distance with Ice Accumulation

Conditions:

- Winds.....Zero
- Runway.....Dry, Level, Paved

• Note •

The following factors are to be applied to the computed landing distance for the noted condition:

- Normal landings will be completed with the flaps set to 50%.
- Sloped Runway - Increase table distances by 27% of the ground roll distance for each 1% of downslope. Decrease table distances by 9% of the ground roll distance for each 1% of upslope.

• Note •

The above corrections for runway slope are required to be included herein for certification. They should be used with caution since published runway slope data is usually the net slope from one end of the runway to the other. Many runways will have portions of their length at greater or lesser slopes than the published slope, lengthening (or shortening) landing ground run values estimated from the published slope as described above.

- For operation in outside air temperatures colder than this table provides, use coldest data shown.
- For operation in outside air temperatures warmer than this table provides, use extreme caution.

Landing Distance - Flaps 50%

WEIGHT: 3600 LB Speed over 50 Ft Obstacle: 88 KIAS Flaps: 50% Power: Smooth power reduction from obstacle to idle at touchdown. Runway: Dry, Paved, Level		Headwind: Subtract 10% for each 13 knots headwind. Tailwind: Add 10% for each 2 knots tailwind up to 10 knots. Runway Slope: Reference Notes Dry Grass: Add 20% to Ground Roll Wet Grass: Add 60% to Ground Roll				
PRESS ALT FT	DISTANCE FT	TEMPERATURE ~°C				ISA
		-20	-10	0	5	
SL	Grnd Roll	1356	1409	1463	1489	
	Total	2833	2908	2984	3022	
1000	Grnd Roll	1406	1461	1517	1544	
	Total	2903	2981	3061	3101	
2000	Grnd Roll	1458	1516	1573	1602	
	Total	2977	3059	3143	3185	
3000	Grnd Roll	1513	1572	1632	1662	
	Total	3055	3142	3229	3274	
4000	Grnd Roll	1570	1632	1694	1725	
	Total	3138	3229	3321	3367	
5000	Grnd Roll	1629	1694	1758	1790	
	Total	3225	3321	3418	3466	
6000	Grnd Roll	1692	1758	1825	1859	
	Total	3318	3418	3520	3571	
7000	Grnd Roll	1757	1826	1896	1930	
	Total	3416	3522	3628	3682	
8000	Grnd Roll	1825	1897	1969	2005	1963
	Total	3520	3631	3743	3800	3583
9000	Grnd Roll	1896	1971	2046	2084	2025
	Total	3630	3746	3864	3924	3656
10000	Grnd Roll	1971	2049	2127	2166	2089
	Total	3746	3869	3993	4055	3733

Section 6 - Weight & Balance

Refer to Section 6 - Weight and Balance of the basic POH for current weight and balance data. Use the following table to determine the Moment/1000 for deicing fluid to complete the Loading Form in the Weight and Balance Section of the basic POH.

- Total fluid tank capacity is 8.5 gallon (32L).
- Deicing fluid weight is 9.2 pounds per gallon.

Gallons	Weight LB	Mom/ 1000@ Tank (FS148.0)	Gallons	Weight LB	Mom/ 1000@ Tank (FS148.0)	Gallons	Weight LB	Mom/ 1000@ Tank (FS148.0)
0.1	0.9	0.14	3.3	30.4	4.49	6.5	59.8	8.85
0.2	1.8	0.27	3.4	31.3	4.63	6.6	60.7	8.99
0.3	2.8	0.41	3.5	32.2	4.77	6.7	61.6	9.12
0.4	3.7	0.54	3.6	33.1	4.90	6.8	62.6	9.26
0.5	4.6	0.68	3.7	34.0	5.04	6.9	63.5	9.40
0.6	5.5	0.82	3.8	35.0	5.17	7.0	64.4	9.53
0.7	6.4	0.95	3.9	35.9	5.31	7.1	65.3	9.67
0.8	7.4	1.09	4.0	36.8	5.45	7.2	66.2	9.80
0.9	8.3	1.23	4.1	37.7	5.58	7.3	67.2	9.94
1.0	9.2	1.36	4.2	38.6	5.72	7.4	68.1	10.08
1.1	10.1	1.50	4.3	39.6	5.85	7.5	69.0	10.21
1.2	11.0	1.63	4.4	40.5	5.99	7.6	69.9	10.35
1.3	12.0	1.77	4.5	41.4	6.13	7.7	70.8	10.48
1.4	12.9	1.91	4.6	42.3	6.26	7.8	71.8	10.62
1.5	13.8	2.04	4.7	43.2	6.40	7.9	72.7	10.76
1.6	14.7	2.18	4.8	44.2	6.54	8.0	73.6**	10.89
1.7	15.6	2.31	4.9	45.1	6.67	8.1	74.5	11.03
1.8	16.6	2.45	5.0	46.0*	6.81	8.2	75.4	11.17
1.9	17.5	2.59	5.1	46.9	6.94	8.3	76.4	11.30
2.0	18.4	2.72	5.2	47.8	7.08	8.4	77.3	11.44
2.1	19.3	2.86	5.3	48.8	7.22	8.5	78.2	11.57
2.2	20.2	3.00	5.4	49.7	7.35	*Minimum Dispatch Fluid Qty		
2.3	21.2	3.13	5.5	50.6	7.49	**Usable Tank Capacity		
2.4	22.1	3.27	5.6	51.5	7.62			
2.5	23.0	3.40	5.7	52.4	7.76			
2.6	23.9	3.54	5.8	53.4	7.90			
2.7	24.8	3.68	5.9	54.3	8.03			
2.8	25.8	3.81	6.0	55.2	8.17			
2.9	26.7	3.95	6.1	56.1	8.31			
3.0	27.6	4.08	6.2	57.0	8.44			
3.1	28.5	4.22	6.3	58.0	8.58			
3.2	29.4	4.36	6.4	58.9	8.71			

Section 7 - System Description

The TKS Anti-Ice System can prevent and remove ice accumulation on the flight surfaces by distributing a thin film of ice protection fluid on the wing, horizontal stabilizer, vertical stabilizer, elevator tips, and propeller. The presence of this fluid lowers the freezing temperature on the flight surface below that of the ambient precipitation preventing the formation and adhesion of ice.

The system consists of nine porous panels, propeller slinger ring, windshield spray nozzles, heated stall warning system, ice inspection lights, two proportioning units, two metering pumps, windshield/priming pump, 3-way control valve, filter assembly, in-line strainer, outlet strainers, two fluid tanks with fluid level sensors, low level switches (*Serials 22T-1460, 22T-1471, 22T-1473 thru 22T-1709, 22T-1732*), filler caps and necks, test port assembly, electrical switching, and system plumbing. The system operates on 28 VDC supplied through the 7.5-amp ICE PROTECT 1 circuit breaker on Main Bus 1 and 5-amp ICE PROTECT 2 circuit breaker on Essential Bus 2.

Storage and Distribution

Two separate and symmetrical 4.25 gallon (16.1L) deicing fluid tanks are serviced through filler caps located on the upper LH and RH wings. Each tank provides a capacity of 4.0 gallons (15.1L) usable and 0.25 gallons (1.0L) unusable, which provides a total system capacity of 8.0 gallons (30.2L) usable. The tanks are sealed wet bays, integral to the wing structure, bounded by the upper and lower wing skins, main spar web, and the inboard, outboard, and lateral tank ribs. The tanks are vented from the outboard ribs to a NACA style ducts attached to access panels on the lower wing skin, just outboard of the tanks. Course-mesh outlet strainers mounted internal to the tanks prevent large objects from obstructing the tank outlets, while a fine-mesh in-line strainer protects the metering pump and windshield/priming pump from damage by contaminants.

Upon activation, two single-speed metering pumps, mounted below the LH passenger seat, draw fluid from the tank and provide fluid pressure to the system at a constant-volume flow rate. The pumps operate both singularly and in parallel according to system mode selection.

If the system is ON and PUMP BKUP is selected, #1 pump will operate (if not failed) based on the mode setting (NORM or HIGH) while #2 pump operates continuously (PUMP BKUP), causing the range and endurance to decrease from the published values, e.g. selection of HIGH and PUMP BKUP will reduce range and endurance as if MAX were selected.

The manifolds of both metering pumps are connected in series and primed by an integral windshield/priming pump which draws fluid from the tank, through both metering pump manifolds, forcing the fluid to the windshield spray nozzles. In the event the metering pumps cannot prime themselves, the windshield/priming pump can be activated to draw fluid from the tank to prime the metering pump manifolds and to remove any entrapped air between the metering pumps and the fluid tank(s). A normally-closed solenoid located between the windshield pump and spray nozzles prevents fluid back flow to the metering pumps.

From the metering pumps, deicing fluid is pushed through a filter assembly, mounted adjacent to the pumps, and then carried through nylon tubing to the proportioning units located in the cabin floor-forward and empennage.

- The cabin floor-forward proportioning unit distributes fluid to the LH and RH Wing Inboard and Outboard panels and propeller slinger ring assembly.
- The empennage proportioning unit distributes fluid to the horizontal and vertical stabilizer panels and the elevator tip panels.

In addition to distributing fluid to the porous panels and propeller slinger ring, the proportioning units provide an additional, distinct pressure drop to the supply lines such that a specific flow rate is provided to each protected surface.

Porous Panels

The proportioned fluid enters the leading edge panels through the inlet fitting(s) on the inboard end of the wing and elevator tip panels, upper end of the vertical panel, and the outboard end of the horizontal panels. The outer surface of the panels is perforated with very small openings to distribute the deicing fluid along their entire length. The panels contain a porous membrane whose pores are nearly 100 times

smaller than the openings of the outer surface. The leading edge of the panel serves as a reservoir as fluid entering the panel fills the cavity behind the porous membrane then overcomes this resistance to be distributed by the openings in the external surface. The inlet fitting of the inboard wing porous panel also supplies fluid to the porous stall strip through an additional capillary tube which further proportions the fluid to provide a specific flow rate to the stall strip. Each panel incorporates a vent opposite the inlet which provides a relatively large opening to release air from within the panel. A check valve prevents air from entering the panel through the vent which slows the "leak-down" of the panel during periods of inactivity.

Windshield Spray Nozzles and Pump

The windshield pump, located adjacent to the main metering pumps beneath the LH passenger seat, supplies fluid to the windshield nozzles. The pump also acts as a priming pump for the main metering pumps. In the event the metering pumps cannot prime themselves, the windshield pump may be activated to purge the system of any entrapped air between the main metering pumps and the fluid tank.

Propeller Slinger Ring


Deicing fluid protects the propeller by a slinger ring mounted to the spinner backing plate where the fluid is distributed by centrifugal action onto grooved rubber boots fitted to the root end of the propeller blades.

Fluid Quantity Sensing

Fluid quantity is measured by a float type quantity sensor installed in the deicing fluid tanks.

Serials 22T-1460, 22T-1471, 22T-1473 thru 22T-1709, 22T-1732: A single-point fluid level switch is installed near the outlet of each tank to provide a redundant "Empty" indication to prevent the system from drawing air.

The fluid quantity information is sent to the Engine Airframe Unit, processed, and transmitted to the Engine Indicating System for display.

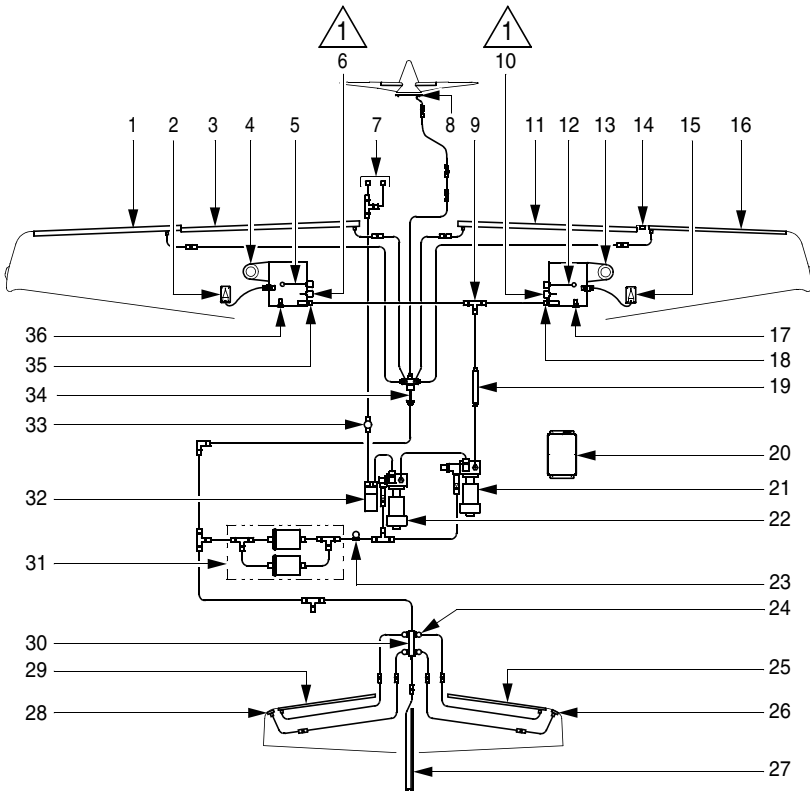

LEGEND

- | | | |
|-----------------------|---------------------------|-----------------------------|
| 1. LH Outbd Panel | 13. RH Filler Cap | 25. RH H Stab Panel |
| 2. LH Vent | 14. Stall Transducer | 26. RH Elevator Tip Panel |
| 3. LH Inbd Panel | 15. RH Vent | 27. V Stab Panel |
| 4. LH Filler Cap | 16. RH Outbd Panel | 28. LH Elevator Tip Panel |
| 5. LH Level Sender | 17. RH Drain Valve | 29. LH H Stab Panel |
| 6. LH Level Switch | 18. RH Tank Strainer | 30. Tail Proportioning Unit |
| 7. Windshield Nozzles | 19. In-Line Strainer | 31. Filter Assembly |
| 8. Slinger Ring | 20. Pump Control Unit | 32. Windshield Pump |
| 9. 3-Way Valve | 21. Metering Pump 1 | 33. Solenoid Valve |
| 10. RH Level Switch | 22. Metering Pump 2 | 34. Main Proportioning Unit |
| 11. RH Inbd Panel | 23. High Pressure Switch | 35. LH Tank Strainer |
| 12. RH Level Sender | 24. Low Pressure Switches | 36. LH Drain Valve |

NOTE

1. Serials 22T-1460, 22T-1471, 22T-1473
thru 22T-1709, 22T-1732 only.

SR22_FM09_5484

Figure-2
System Schematic

System Control

System operation is controlled by five bolster panel switches and three MFD softkeys:

- **Bolster Panel Switches:** Metering pump operation and mode control (flow rate) are controlled by the NORM, HIGH, and MAX switches. WINDSHLD controls the windshield pump operation. PUMP BKUP is used in the event of certain system failures.
- **MFD Softkeys:** Tank selection is provided by three MFD softkeys on the MFD Engine Page. Automatic tank selection is provided by the default, AUTO mode. While the system is operating, the fluid quantity in each tank will be passively balanced by alternating the selected tank using the 3-way control valve.

Mode Control

- **NORM** controls both pumps to operate quarter-time intermittently to provide 100% flow rate, i.e. 30 seconds on, 90 seconds off.
- **HIGH** controls #1 pump to operate continuously to provide 200% flow rate, i.e. two times the normal flow rate.
- **MAX** controls both pumps to operate continuously for 2 minutes to provide 400% flow rate, i.e. four times the normal flow rate. Pump operation then reverts to the system mode selected by the ICE PROTECT Mode Switch.
- **WINDSHLD** controls the windshield pump to operate continuously for approximately 3 seconds.
- **PUMP BKUP** controls #2 pump to operate continuously to provide 200% flow rate, i.e. two times the normal flow rate. When pump backup mode is selected, an alternate circuit bypasses the Timer Box and supplies power to the #2 metering pump which in turn operates continuously.

Fluid Tank Control

- **AUTO:** While the system is operating, the fluid quantity in each tank is passively balanced by the avionics system using the 3-way control valve and the sensed quantity of each tank.
- **LEFT:** Ice protection fluid is drawn from the left tank regardless of sensed quantity.

- RIGHT: Ice protection fluid is drawn from the right tank regardless of sensed quantity.


System Indicating

System Indicating is displayed as bar graphs and text in the lower left corner of the MFD ENGINE page. The bar graphs, marked from 0 to 4 U.S. gallons in 1-gallon increments, indicate LH and RH tank fluid quantity. Fluid quantity is also displayed numerically below the bar graphs in 0.1-gallon increments. When the system is operating in the default, automatic tank selection mode (AUTO), a white box is centered around the “L” and “R” located above each bar graph and a cyan box is displayed around the selected Anti-Ice System mode. During normal operation, the white box will switch between the left and right tank as the fluid level changes. In the case of an electronic display failure (reversionary mode), fluid quantity is displayed along the LH edge of the PFD and the system maintains the tank selection mode that was current when reversionary mode was activated. Manual tank selection mode is selected by pressing the ANTI-ICE softkey to access control of the LEFT and RIGHT tanks. In manual mode, a cyan box is displayed around the selected tank, gallons remaining in that tank, and the selected Anti-Ice System mode. Pressing AUTO returns the system to automatic tank selection mode.

System Endurance is displayed on the MFD ENGINE Page for the different system modes based on the total sensed fluid quantity and published system flow rates. A cyan box depicts the user selected system mode. System Range is displayed on the MFD ENGINE Page for the selected system mode based on the calculated system endurance and the current ground speed.

If tanks are selected manually, system range and endurance calculations use only the sensed fluid quantity of the selected tank. While in PUMP BKUP, system range and endurance calculations use the published system flow rate.

Refer to the Perspective+ Integrated Avionics System Pilot's Guide for additional information on system annunciation and control.

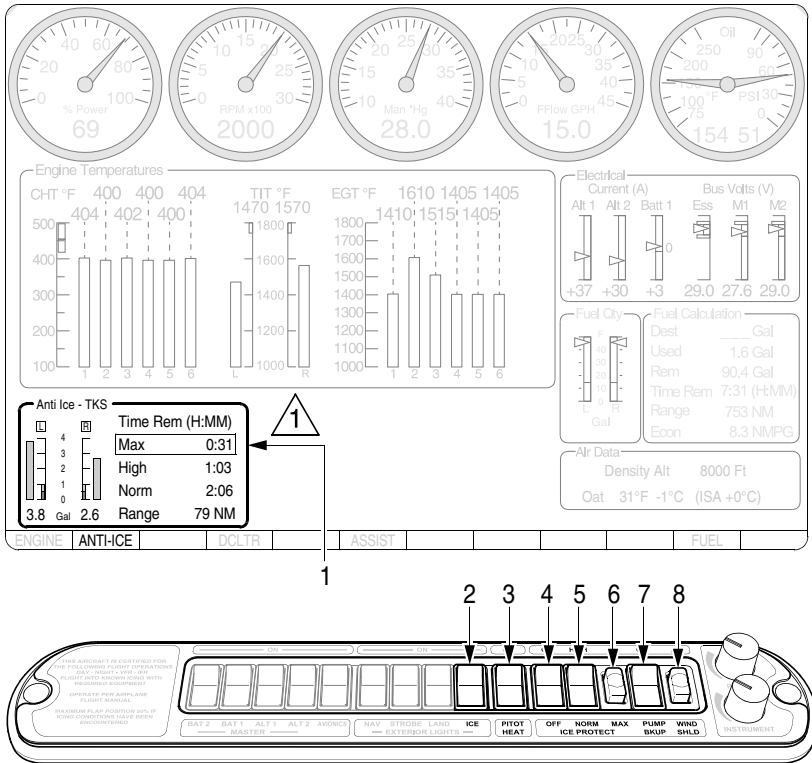

Bolster Panel

LEGEND

- 1. Anti-Ice System Indication
- 2. Ice Inspection Lights
- 3. Pitot and Stall Vane Heat
- 4. Anti-Ice System ON / OFF Switch
- 5. NORM / HIGH Mode Switch
- 6. MAX Mode Push Button
- 7. Pump Backup Switch
- 8. Wind Shield Push Button

NOTE

1 Illustration depicts system during Auto Tank Mode with LH and RH tanks ON while operating in MAX mode.

SR22_FM09_5406

Figure-3
System Indication and Switching

Stall Warning System

Stall warning is provided by the lift transducer, mounted on the leading edge of the right wing and the stall warning computer located under the cabin floor. The lift transducer senses the force of the airstream on the vane, producing an electrical output to the stall warning computer. When the stall warning set-point is reached, the stall warning computer provides a signal to the avionics system to activate the stall warning aural alert and CAS message. The stall warning computer also provides the information used to generate the dynamic stall speed awareness indication (red band) on the airspeed tape which indicates the relative proximity to the aircraft stall speed based on the wing loading (weight, angle of bank, etc). The stall warning computer operates on 28 VDC supplied through the 5-amp STALL WARNING circuit breaker on the ESS BUS 2.

Ice protection for the lift transducer is provided by two faceplate heaters, one vane heater and one case heater using the PITOT HEAT switch. To prevent overheating during ground operations, a signal from the avionics is used to operate the heaters at 25% power during ground operation or 100% power while in the air. The lift transducer heat is powered by 28 VDC supplied through the 10-amp STALL VANE HEAT circuit breaker on the NON-ESS BUS.

The stall warning computer receives an signal from the avionics system to reduce nuisance stall warning while the aircraft is on the ground. The stall warning is inhibited when ground speed is less than 30 knots or airspeed is less than 55 KIAS. To allow a preflight check of the system, stall warning is enabled if RPM is less than 500 and flaps are set to 100%.

An IPS-ON discrete signal is sent to the stall warning computer when the ice protection system is set to ON. This adds additional stall warning margin to the aircraft beyond the required 5 KIAS to account for ice contamination on unprotected surfaces. Although this ensures the required margin is maintained during/after an icing encounter, it may be excessive when the aircraft is not contaminated by ice shapes.

Ice-Inspection Lights

To provide visual verification of icing conditions and confirmation of fluid flow, ice inspection lights are flush mounted to the RH and LH fuselage skin just aft of the engine cowling. The bi-directional

inspection lights illuminate the leading edge of the wing and horizontal stabilizer. Components of the system include the LED light assemblies and a two-position toggle switch labeled ICE on the Exterior Lights section of the bolster switch panel.

The ice-inspection lights operates on 28 VDC supplied through the 7.5-amp ICE PROTECT 1 circuit breaker on MAIN BUS 1.

Section 8 – Handling, Service, & Maintenance

• Caution •

During long periods of non-use, the porous panel membranes may dry out which could cause uneven fluid flow during subsequent operation. Perform the Pre-Flight Inspection every 30 days to keep porous panel membranes wetted.

Use only approved deicing fluid. See Section 2, Limitations. To prevent fluid contamination, maintain a clean, dedicated measuring container and ensure mouth of fluid container is clean before dispensing. Secure the filler cap immediately after filling.

Certain solvents may damage the panel membrane. Use only soap and water, isopropyl alcohol, or ethyl alcohol to clean panels. Do not wax leading edge porous panels.

Storage

To prepare the Anti-Ice System for flyable storage, fill the deicing fluid tanks and perform the Pre-Flight Inspection to verify evidence of ice protection fluid along the length of all porous panels. The tanks may then be drained until the next service interval (30 days minimum) or operation of the system is desired.

Servicing

Deicing Fluid Tanks

The deicing fluid tanks are serviced through filler caps in the upper wing skins. Each tank is individually drained and vented by lock-open/lock-close valves in the lower wing skins.

Porous Panels

Periodically clean porous panels with soap and water using a clean, lint-free cloth. Isopropyl alcohol may be used to remove oil or grease.

Metering Pump Priming

If air entered the system due to the fluid tank(s) running dry during system operation, it may require several cycles of the windshield/priming pump to prime the metering pumps.

In the event that the metering pumps cannot prime themselves, the windshield/priming pump may be cycled, 3s ON, 3s OFF, to draw fluid from the tank to prime the metering pump manifolds and to remove any entrapped air between the metering pumps and the fluid tank(s).

Intentionally Left Blank